


The use of Acetone or Alcohol can be faster and cleaner.

Surfaces where devices are to be attached to or Inked labeling is required; need to be cleaned FIRST.

An abrasive eraser can be used but may take time.

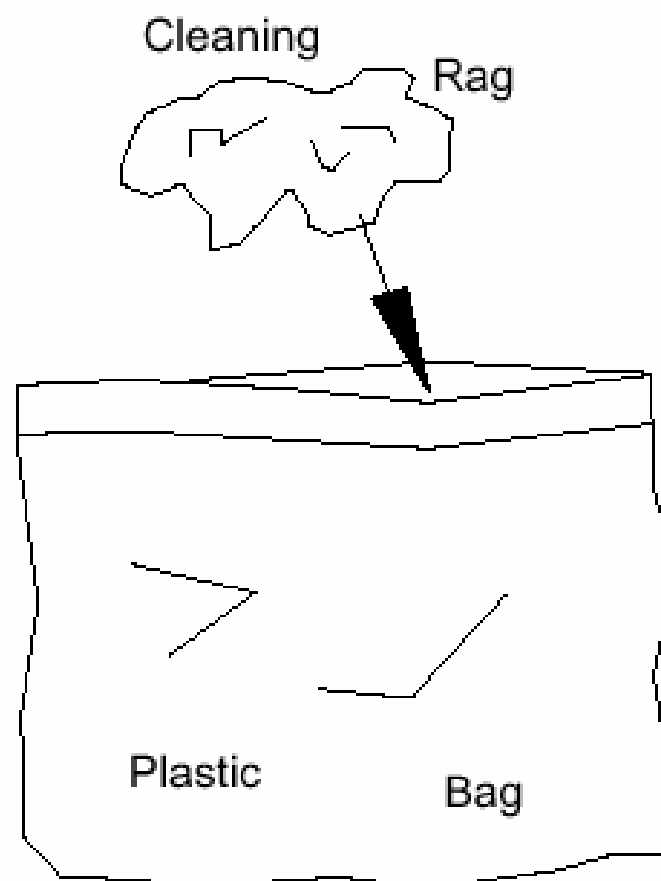

Contaminated rags MUST be placed in a plastic bag. When rag is no longer usable, take it to HAZARDOUS WASTE.

**TELECOMMUNICATIONS
CONSTRUCTION
STANDARDS**

by Vern Bouwman - RCDD Retired
1-8-2001

**CABLE
and
WIRE**

Description

**CLEANING SURFACES
Prior to placing LABELS**

DRAWING

LB-CLN