



Adhesive Backed

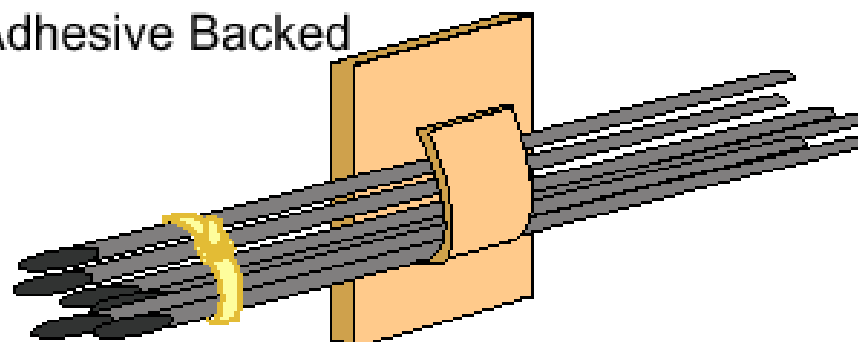

WIRE BUNDLE CLIPS

CABLE TIE MOUNTS

Use 18 inch spacing - maximum

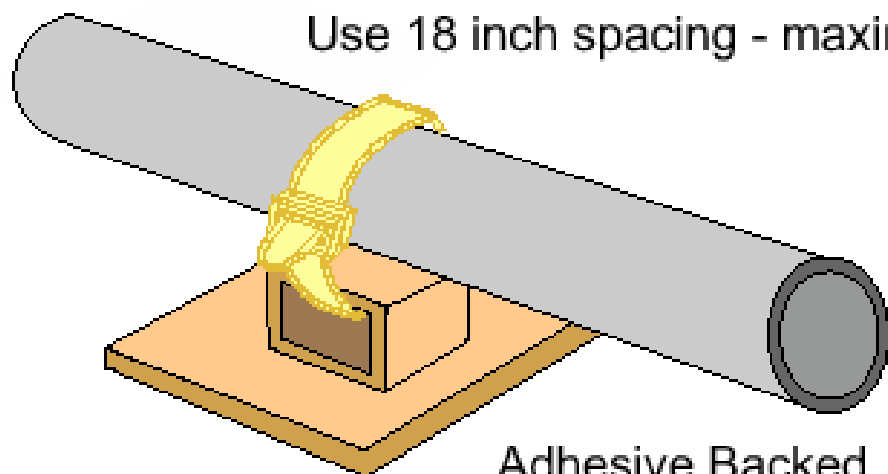

Adhesive Backed
or Screw - Down base

ALL CABLE AND WIRE SHALL BE
ROUTED THROUGH RINGS, CLIPS
OR TIES, AS DETAILED HERE AND
OTHER "SP" CODED DETAILS.

**ALL RUNS MUST BE PARALLEL
TO BUILDING LINES**

**TELECOMMUNICATIONS
CONSTRUCTION
STANDARDS**

by Vern Bouwman - RCDD Retired
1-18-2002

**CABLE
and
WIRE**

Description

SUPPORT MOUNTS
Used to Support Telecommunication
CABLE or WIRE

DRAWING

SP-MNT