


## EXAMPLE for FANNING CONDUCTORS BEFORE TERMINATION

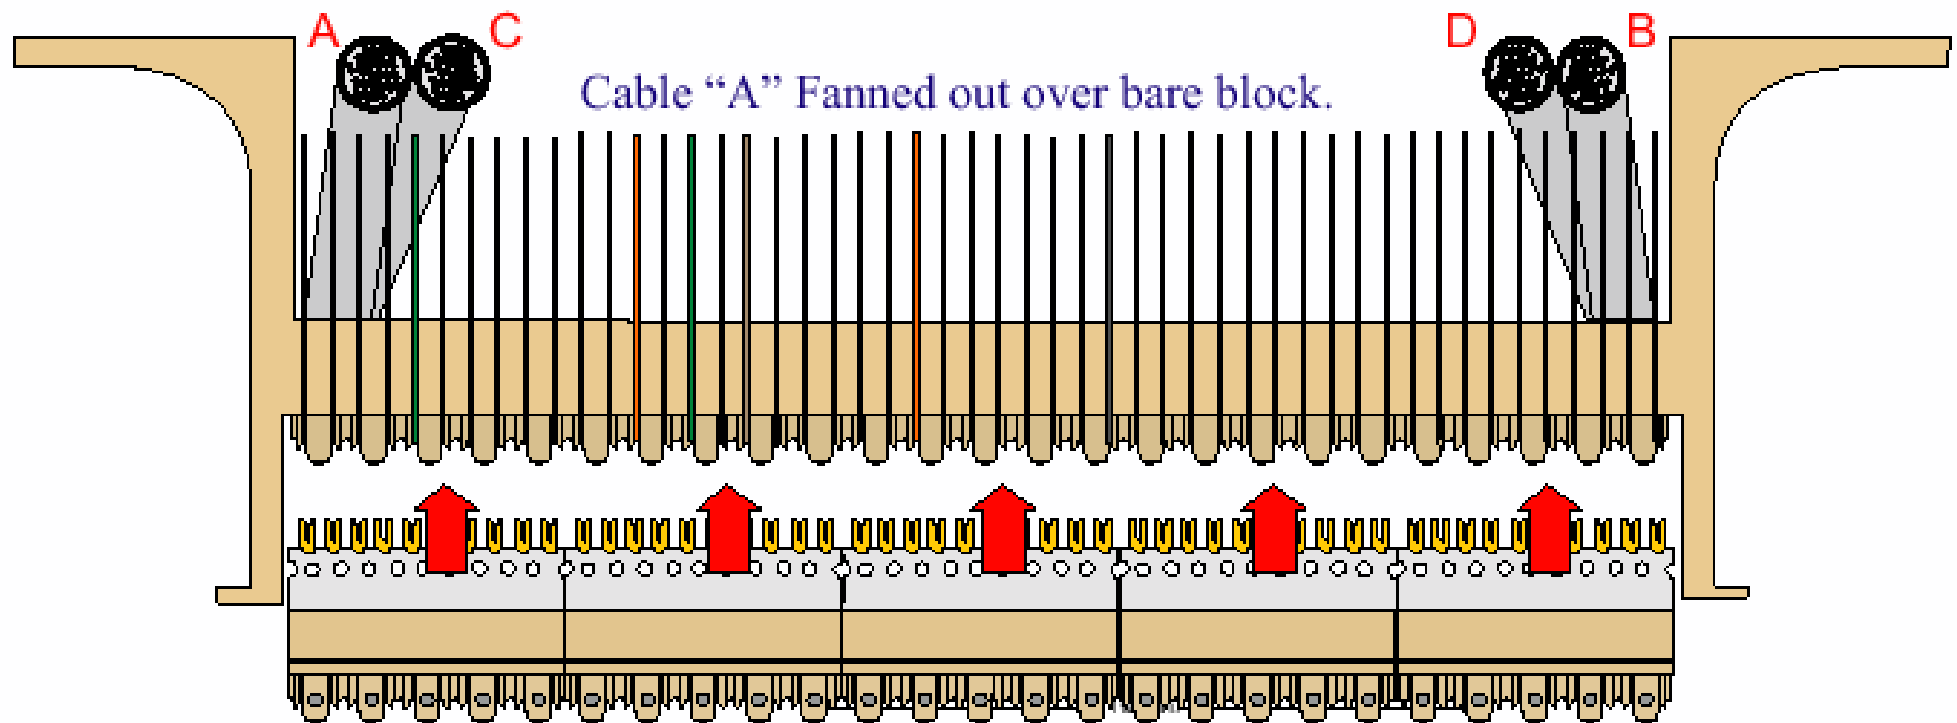

(5) 110C5's are punched over conductors to terminate cable pairs with a 5-Pair punch down tool.

**TELECOMMUNICATIONS  
CONSTRUCTION  
STANDARDS**

by Vern Bouwman - RCDD Retired  
1-18-2002

**CABLE  
and  
WIRE**

Description  
**25 Pair Cable  
TERMINATIONS  
On 110 Blocks**

DRAWING

**TR-25B**